

Illustrations for the Bendix/King KLN89B GPS Computer


Doug Dupuie



Iowa State Press
A Blackwell Publishing Company

Chapter 2

The **screen** on the front of the GPS computer serves as the monitor.

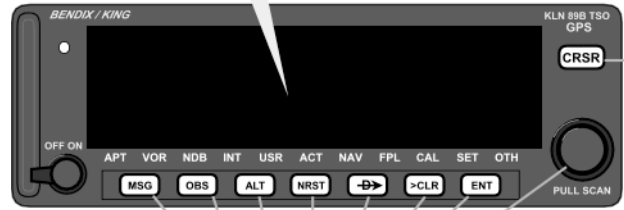

The **knobs** and **buttons** serve as the keyboard for the GPS computer.

2-5

Bendix/King



Pages appear on the GPS computer screen and present information related to a particular topic. For example, the **airport page** can display information about any chosen airport.

2-6

Bendix/King

Use the **outer knob** to select different pages.

1



The name of the page you have currently selected is shown here.

2

2-7

Bendix/King

Extended pages show additional information about the same topic.

1



The extended page you are viewing is displayed here. For example, this is the second extended page of the airport page.

3

Use the **inner knob** to move between extended pages.

2

2-8

Bendix/King

Use the inner knob to dial letters and numbers. **3**

Use the outer knob to move the flashing cursor between items on the page. **2**

Press the **CRSR** button to engage **cursor mode**. A **flashing cursor** will appear over one of the items on the page, indicating that it is ready for editing. **1**


2-9

Bendix/King

Use the outer knob to select the **flight plan page**.

2-10

Bendix/King

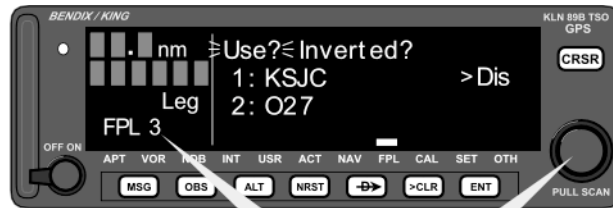

Flight plans can be stored in FPL 1 through FPL 24 (the extended pages of the flight plan page). Use the inner knob to move between the stored flight plans.

1



Switching to cursor mode, highlight the Use? option, and press the ENT button.

2



The waypoints in the stored route are inserted into flight plan 0, and the stored route becomes the active flight plan.


3

Use the outer knob in cursor mode to highlight a line on the flight plan page.

1


Dial the name of the waypoint and press the ENT button.

2

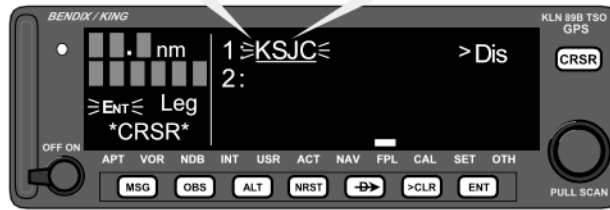


The waypoint now appears in your flight route and the computer is ready to accept more waypoints.

3

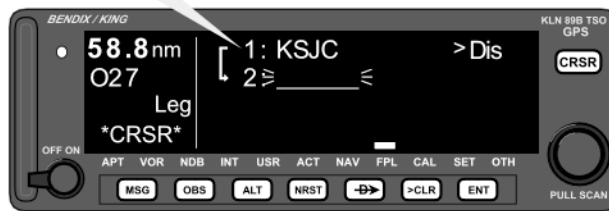


Once you are in the APT pages, use the inner knob to scroll to APT page 7.

1

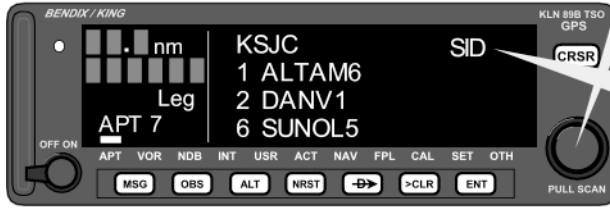


Make sure that "SID" is displayed in the upper right corner.

2

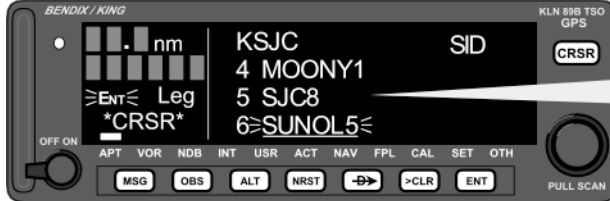

In cursor mode, use the outer knob to highlight the departure you want.

3

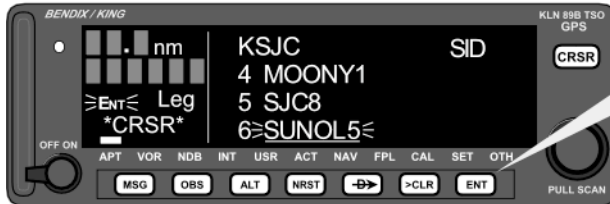


Press ENT to confirm your choice.

4


2-13

Bendix/King

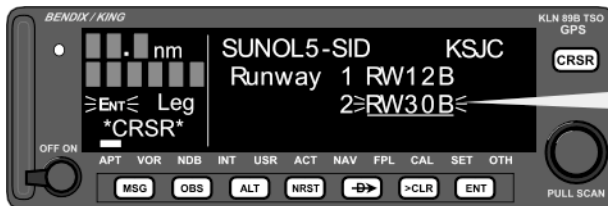

Select your departure runway from the menu.

1

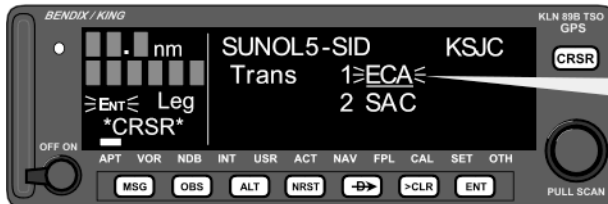


Now select your departure transition.

2

2-14


Bendix/King

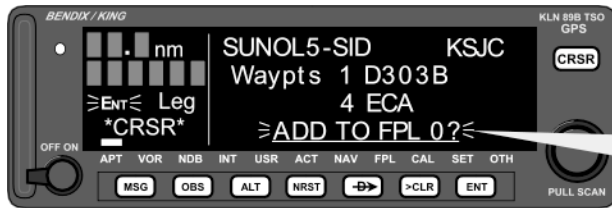

Respond to the ADD TO FPL 0? prompt to load all of your selections into the active flight plan.




Once you are in the APT pages, use the inner knob to scroll to APT page 8. **1**

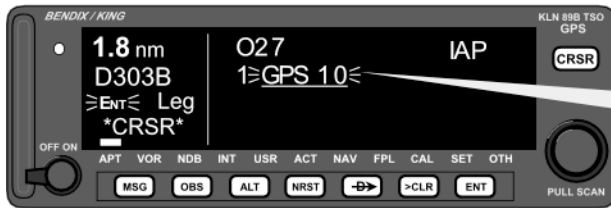

Choose your approach from the approach menu. **2**



Choose your transition from the transition menu. **3**

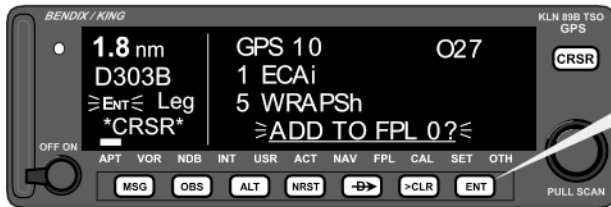

Press the ENT button to load your approach into your flight plan. **4**



Review your flight plan on the flight plan page. In cursor mode, use the outer knob to scroll between the waypoints in the route.

1

Check the sequence of waypoints.

2

Check the distances between the waypoints.

3

Use cursor mode to highlight the Distance column heading. Press the CLR button to display other kinds of data about your route.

1



The DTK option shows you the desired tracks between the waypoints in your route.

2

